


- SWR
- Phase
- Z=R+jX
- Z=R||+jX
- RL
- TDR
- Smith

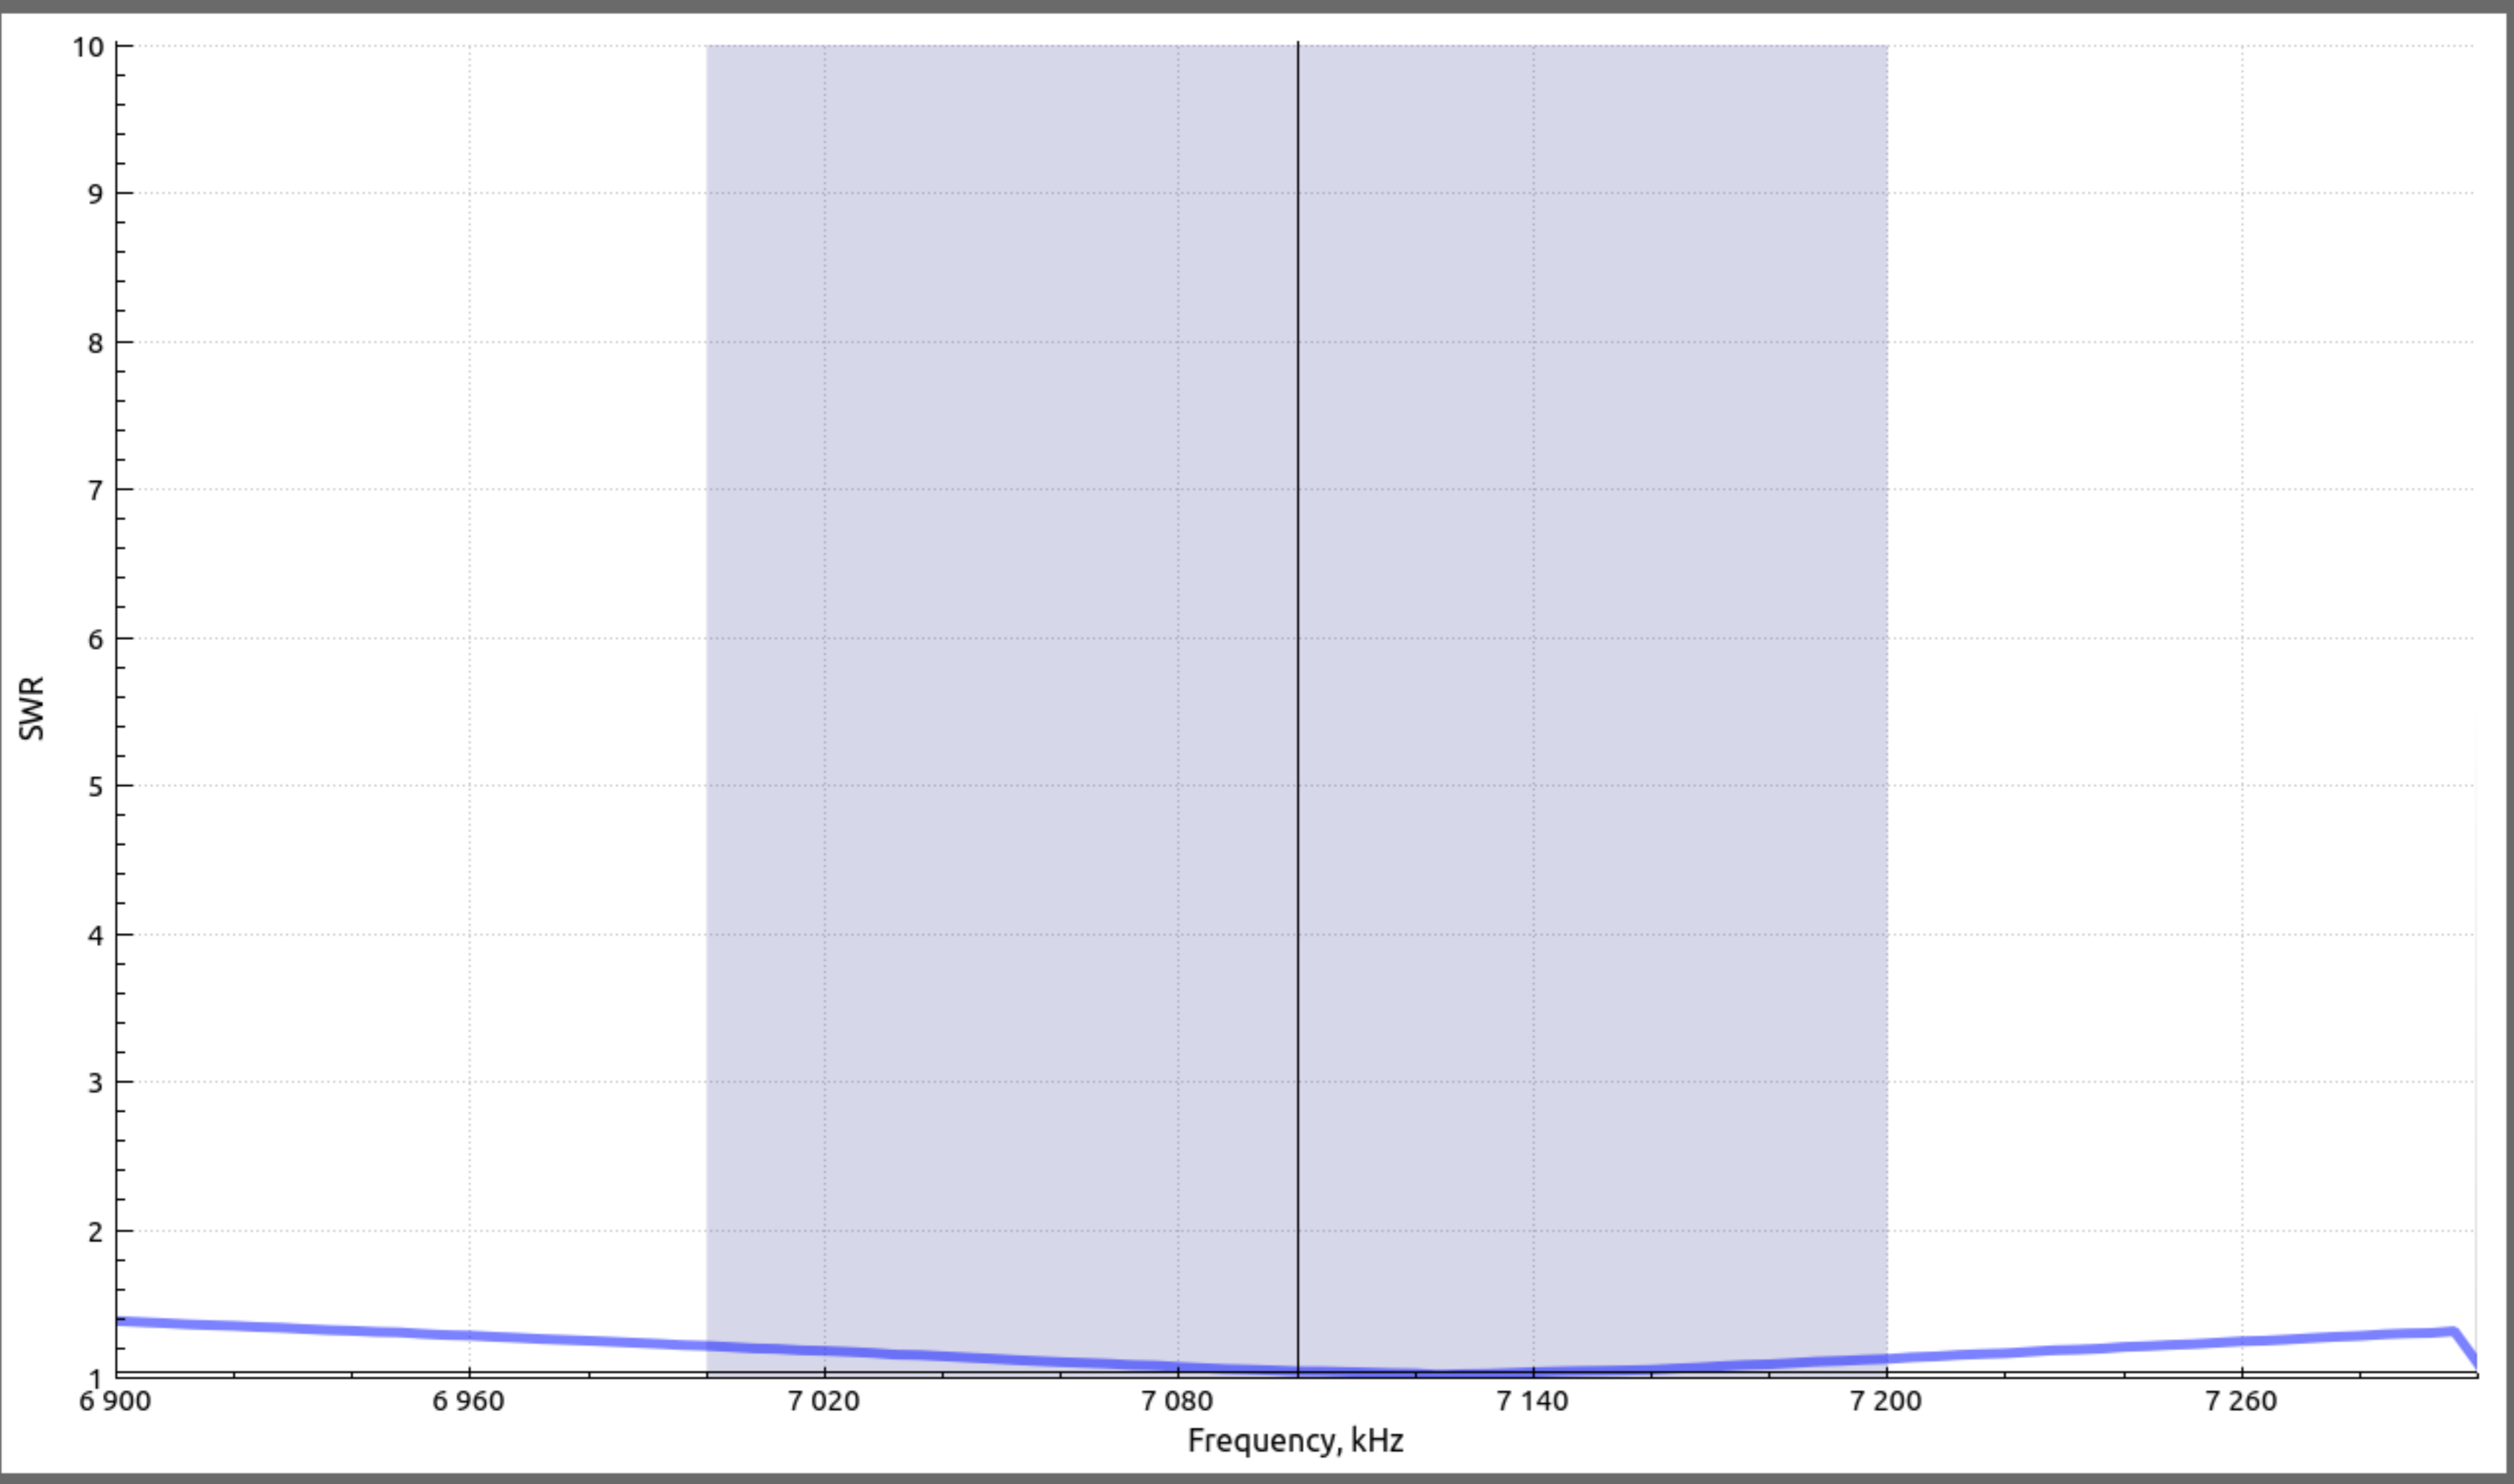

Frequency, kHz

Center:

Range (+/-):

Points:

Calibration

Run

Presets (center, range), kHz

Center	Range(+/-)	Points

Measurements

Name
DK40

- Settings
- Export
- Import
- Print
- Screenshot
- Screenshot from AA
- Data from AA