


SWR Phase Z=R+jX Z=R||+jX RL TDR Smith

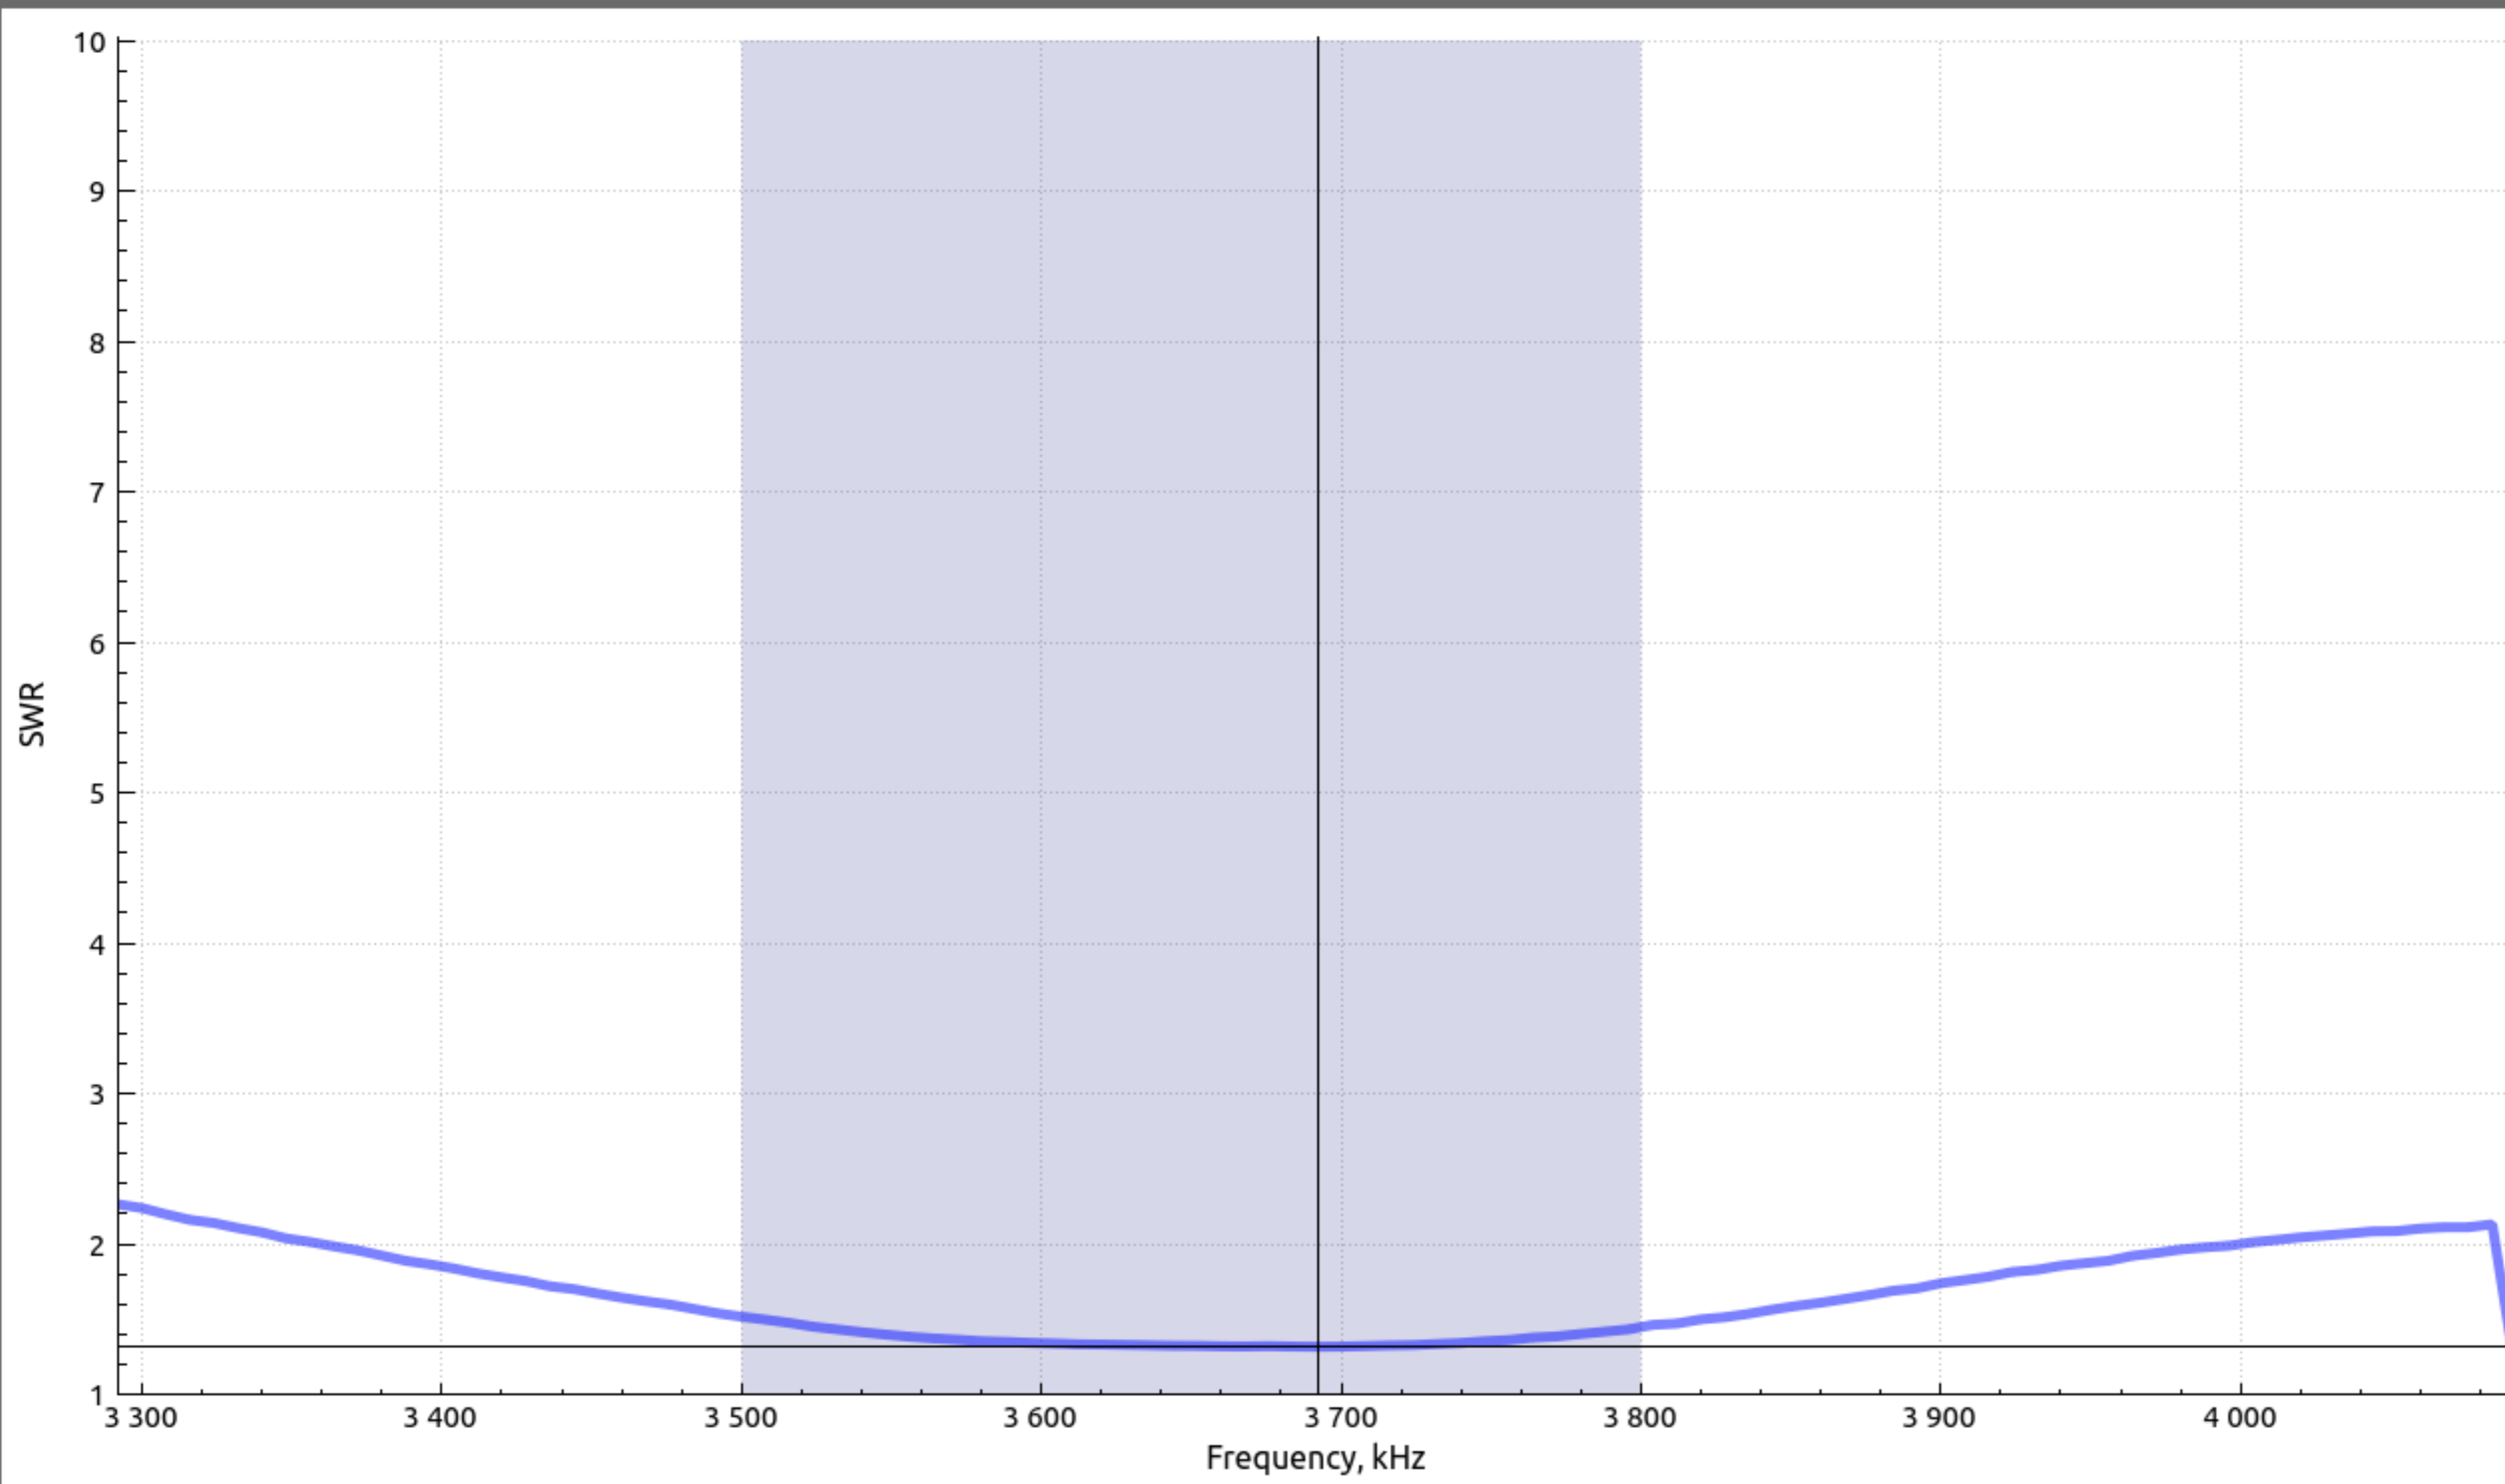

Frequency, kHz

Center:
 Range (+/-):
 Points:

Calibration

Run

Presets (center, range), kHz

Center	Range(+/-)	Points

Measurements

Name
DK80